



Hermes 3.0

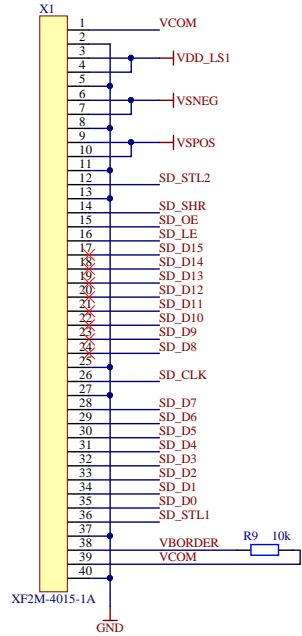

Data shift start pulse:
SHR=H: STL2 is start pulse input
SHR=L: STL1 is start pulse input (default)

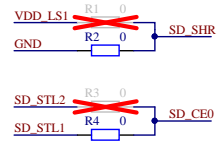

Gate scan direction:
DIR=L: SPV2 is start pulse input
DIR=H: SPV1 is start pulse input (default)

